




Works with Apple Find My

Locate it on a map in the Apple Find My network

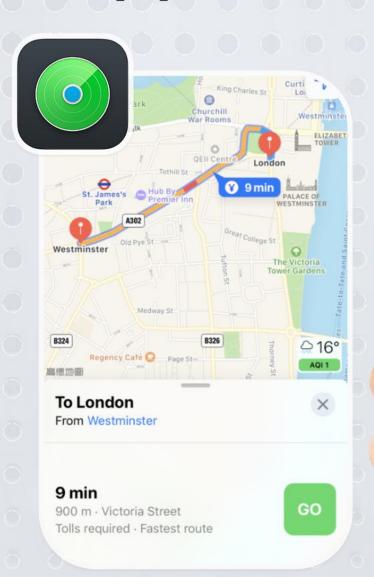

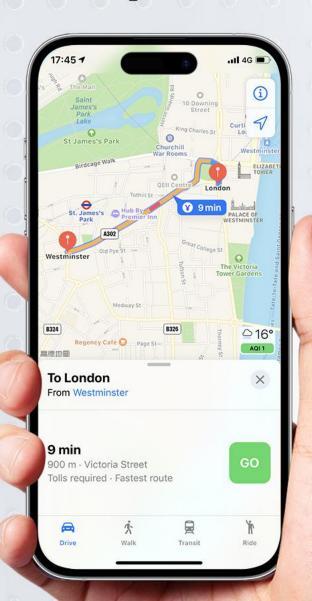



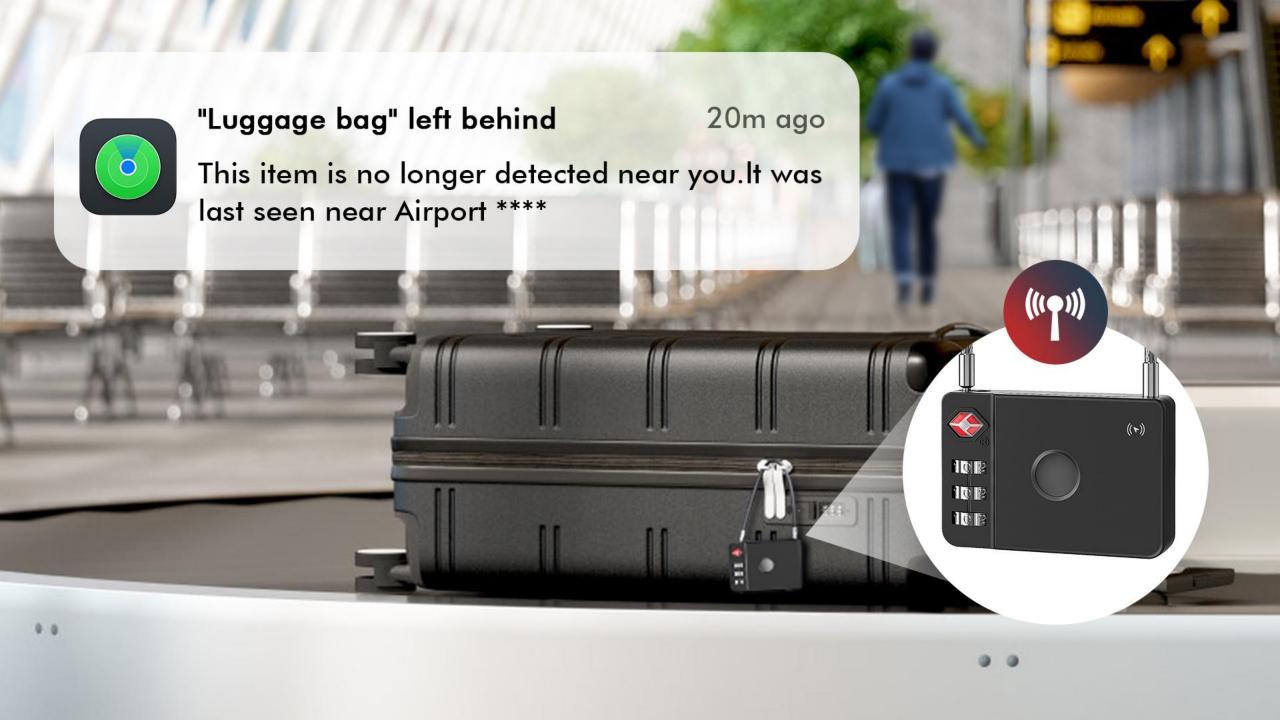





Replaceable CR2032 Button Battery

Lasts for use 6-8 months








This lock fits most zippers, duffle bags, purses, computer bags, backpacks, suitcases, and briefcases.





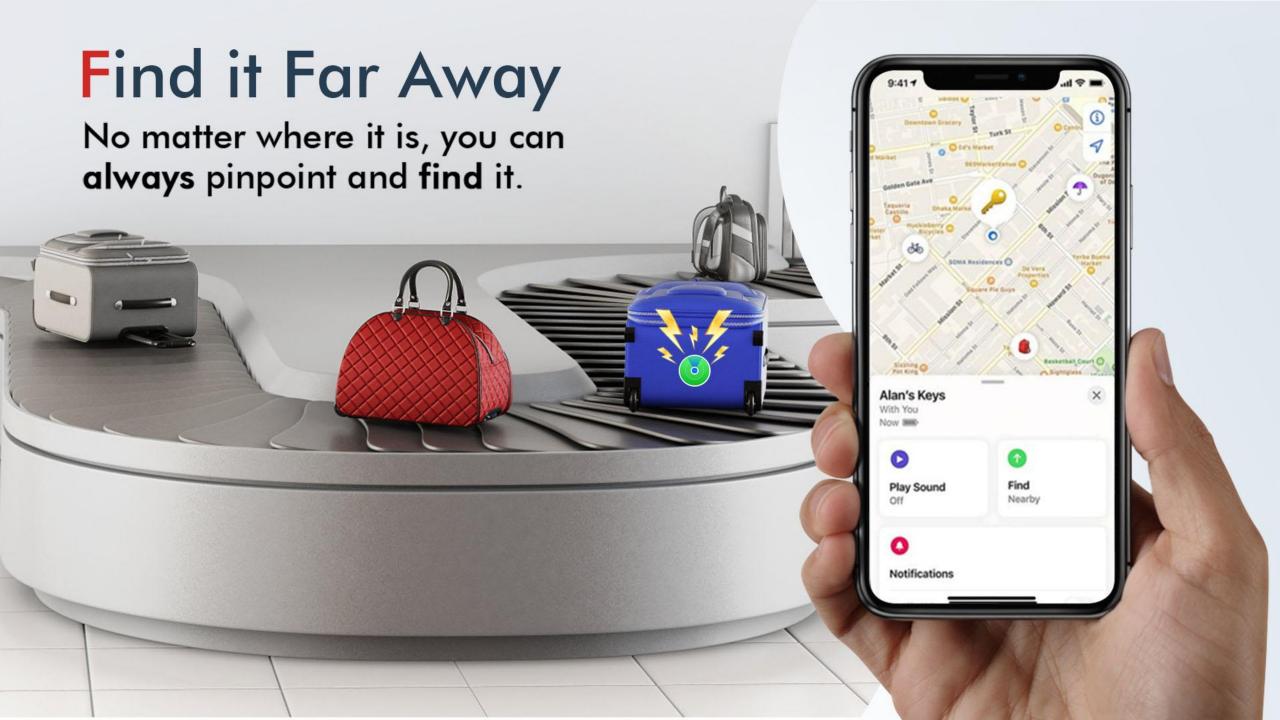




Distance from Bluetooth 50-100 meters, it will take about 5-20 min (a pop-up window will remind you that you have left something behind)



Luggage bag" left behind 20m ago
This item is no longer detected near you. It was
last seen near Airport ****



3-Digit Dials

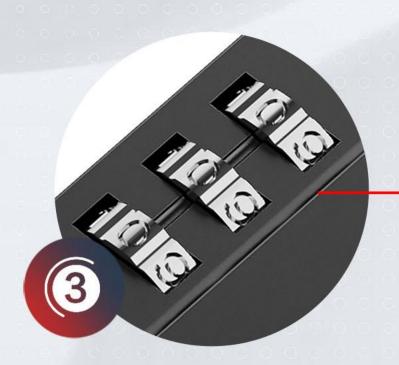







Protect Your Various Luggage for You LUGGAGE TOOLBOX BACKPACK Prevent from Prevent it from being stolen being lost ((+)) 1:1













Before beginning the connection, please readthe following carefully: Ensure that your Apple IDis logged in and functioning correctly. You canfind this in the 'Settings' at the top of your iOSdevice and log in to your Apple ID. Then proceed with the next steps.

Check for updates. It is recommended to use the latest version of iOs, iPadOs, or macOs for the Apple Find My app to locate this item. On Apple Watch, use the latest version of watchOs.

Turn on"Find My"
App and "Bluetooth"

Tap" Add Item" located at the Bottom on "Item" menu then select "Other Supported Item" Press the switch button once to power on your MiCord and once your MiCord is located, tap "Connect"